



GENIO FRONTIER

Quick Start Guide



USR LAB
www.genio.kr

610, J-Tower, 330 Yeomjeon-ro, Michuhol-gu, Incheon, Korea
TEL: 1670-8817 FAX: 032)724-0542

Important Safety and Installation Instructions



 
Information related to the possible electric shock, fire hazard and personal injury has been included in this list. Please read the contents carefully and use the product safely.

1. Be well-acquainted with this user's manual before using the product.
2. Please use the exclusive power supply. When obliged to use the other power supply, be careful of the output voltage and polarity.
3. Do not dismantle the product under any circumstances. Dismantle at discretion may not guarantee the warranty repair.
4. Keep the power cord away from the other objects. Make sure the cord is not pressed under any heavy objects or piano.
5. When using the adapter or headphones, connect or release with grasping the plug instead of cable.
6. Keep the product away from direct sunlight, humidity, and hot or cold air currents.
7. The power supply cord should be unplugged from the outlet when left unused for a long time.
8. Please ask help to the dealer from whom you purchased for any after service.
9. This product is operating independently, but it can be damaged by the difference of the input/output characteristics when connected with external device.
10. Avoid playing for long periods at high volume or in an uncomfortable posture, as this may cause hearing loss.
11. Place the product at the location or position with smooth natural air flow for proper ventilation.
12. Pay attention to any liquid like water or coffee not to be spilled. If spilled, do not disassemble the product, and ask for repair. Turning on the system while it is wet may damage the key sensors or the product.
13. For the below cases, the product should be serviced by the qualified service personnel or the dealer from whom you purchased.
 - When the power supply cord or the plug has been damaged.
 - When the metal material has fallen, or liquid has been spilled on the product.
 - When the inner parts have been exposed.
 - When the product does not operate correctly.
 - When the exterior of the product has been fatally damaged.
14. Standard tuning is required for ensemble of acoustic and silent play together.
15. For correct operation, it is essential to do the initializing process after the key height adjustment or action adjustment.
16. There is a little heat generation in device during use, but it is not a problem of the product.

Name & Function of each part


CONTROL UNIT

Rear View

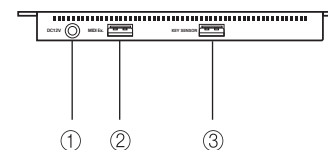


- ① **DC JACK**: System power is provided through the power adapter.
- ② **MIDI Ex**: Connects with external MIDI device.
- ③ **KEY SENSOR**: Connects with Key Sensor Rail.

 Left View

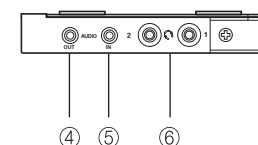


- ④ **AUDIO OUT**: Audio signal output terminal
- ⑤ **AUDIO IN**: Audio signal input terminal
- ⑥ **Headphone Jack**: Supports up to 2 headphones

 Right View

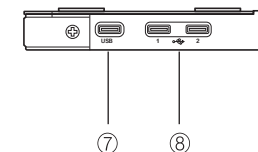

- ⑦ **USB PD**: Used for connection to a PC, tablet, etc.
- ⑧ **USB Port**: Port for using USB devices.

 
Down view

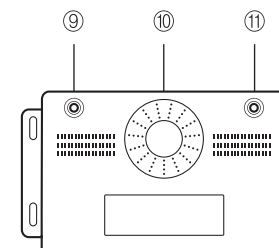

- ⑨ **POWER Button**: Turns the system on and off.
- ⑩ **DIAL Volume**: It's used for Volume Adjustment, Sound Selection and etc.
- ⑪ **Preset Button**: Select the system's sound.


Connecting to Smart Devices

 By downloading the Frontier app, you can access various features. Without connecting the device, only basic functions such as Silent function, Volume control, and Preset options are available.

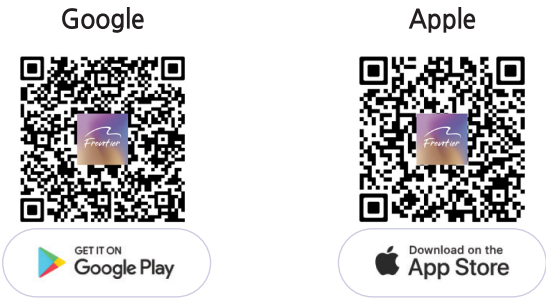


Wired Connection

 When connected via wired, Bluetooth will be deactivated.

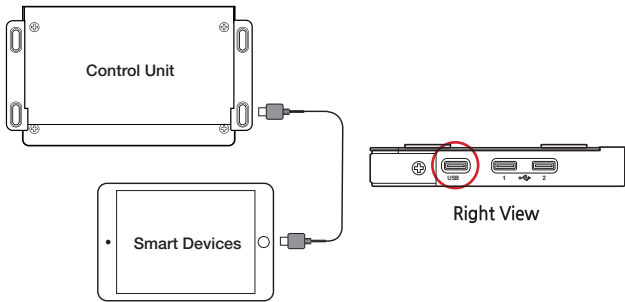


Wireless Connection

 When connected wirelessly, the Record and Key Initialization modes will be deactivated.

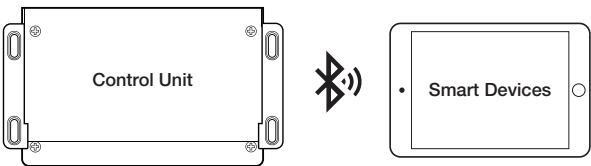

Connecting to Smart Devices

 Wireless Connection Method

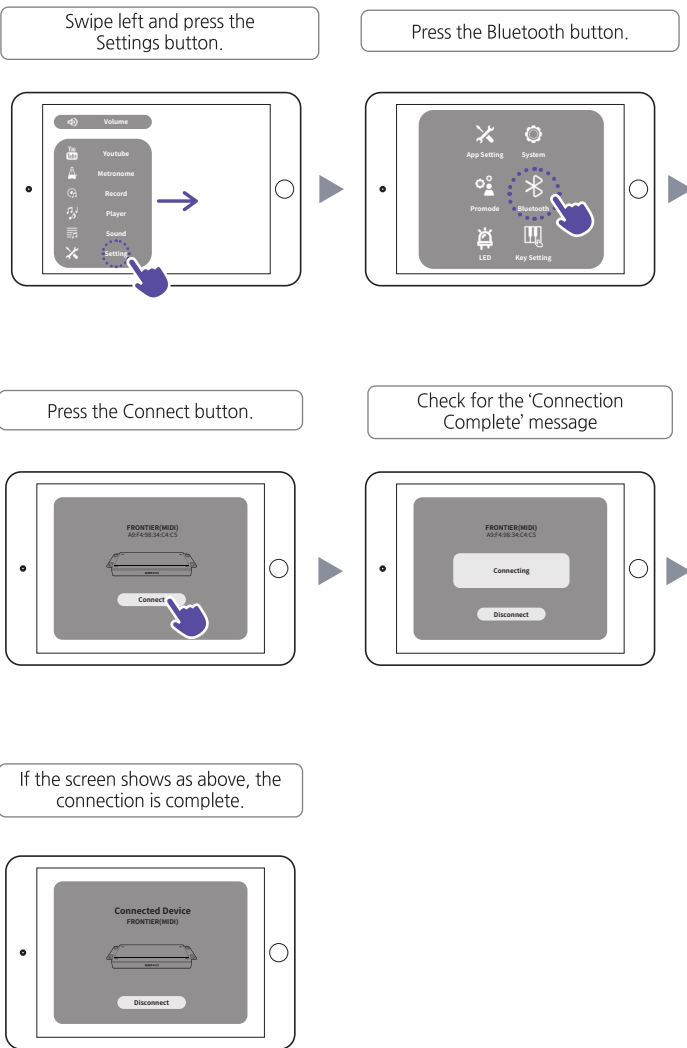

Bluetooth Audio Connection

